



# PEGBOARD


This orderly pegboard has pegs of three colors and three sizes. There is a convenient storage compartment behind the board.

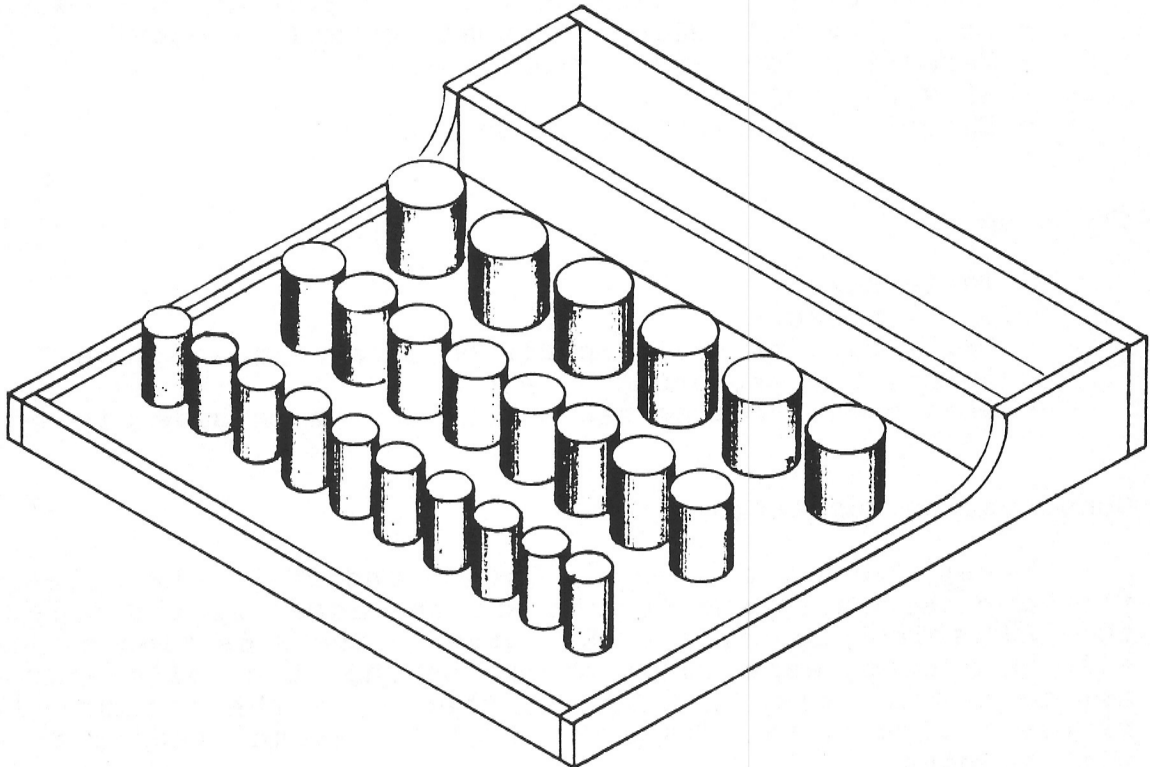

\* Please use caution when using this toy with \*  
\* children who may put small parts into their mouths. \*

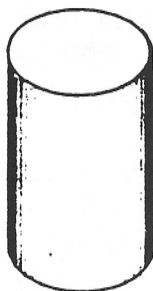

1 1/4" DIA. X 2" LG. PEG  
6 REQ'D PLUS 2 SPARES  
PAINT BLUE

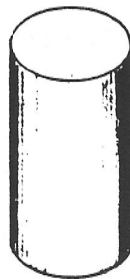


1" DIA. X 2" LG. PEG  
8 REQ'D PLUS 2 SPARES  
PAINT RED



3/4" DIA. X 2" LG. PEG  
10 REQ'D PLUS 2 SPARES  
PAINT YELLOW

board on the turntable. Using Varathane spray cans of enamel, spray on one coat. When dry, spray on a second coat. Then reverse the pegs and spray again. For durability and a finished look, spray with a coat of gloss Varathane varnish.

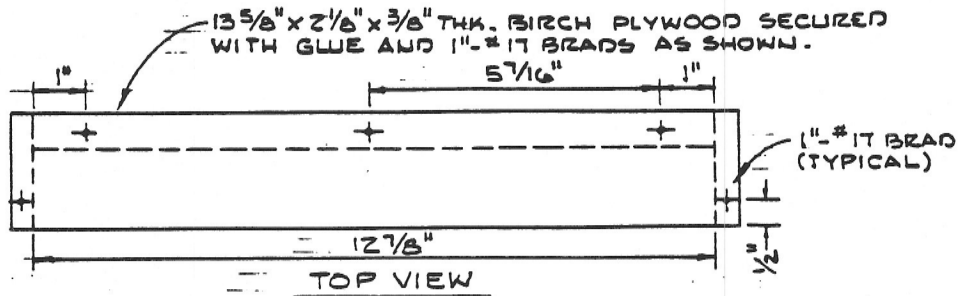

3/8" THK. PLYWOOD PANEL (TYPICAL BOTH SIDES)

